

Projector Loading Instructions

for JEL-3325CB or JEL-3325ER

Thank you for purchasing the **JEL-3325CB or JEL-3325ER Jelco Laptop/projector Carry Case**. This travel case was specifically designed to accommodate many different multimedia projectors and laptop computers as well as their accessories. Please take a few minutes to review how to prepare the case for your specific projector model.

Your case comes with a long divider and two pads. Depending on the particular model of projector you have, there may not be a need to use the foam pads.

First, position your projector in the case as shown in either Figure 1 or Figure 2. Next, take the long divider and wrap it around the projector as shown and attach to the case's inside walls. You can then position the pads in any areas that are loose fitting to prevent the projector from sliding. The remaining area can then be used for cords, cables, and a remote control. Additional accessories can also be stored in the outside compartment.

Hook and loop straps have been provided to secure your projector and laptop computer in each compartment. Please remember to do this before closing your case.



Figure 1



Figure 2



JELCO, INCO.
450 Wheeling Rd., Wheeling, IL 60090 USA
Phone: 888-875-3526/+1-847-459-5207 **Fax:** 847-459-5262
www.jelcoinc.com